INSTRUCTION MANUAL

POWER LINE MULTI-METER (VOLTMETER)

SVLC-110L

1-PHASE 2-WIRE / 1-PHASE 3-WIRE / 3-PHASE 3-WIRE ANALOG OUTPUT

HARDWARE MODEL D

○ DAIICHI ELECTRONICS CO., LTD.

Thank you for purchase of DAIICHI ELECTRONICS product. Please read this instruction manual carefully before use.

Safety precautions

Usage environment and product conditions

Please be sure to use this product in a place that meets the following conditions.

In places that do not meet this condition, it may cause malfunction or failure and product life decline.

- ullet Within the range of ambient temperature -10 to +55 $^{\circ}$ C, humidity 85% RH or less.
- Place free of dust, corrosive gas, salt and oily smoke. (Corrosive gas: SO_2 / H_2S , etc.)
- Location that is not affected by vibration and shock.
- Location that is not affected by external noise.
- Altitude 2000m or less.
- If this unit directly measures an inverter output of cycle control, SCR phase angle control or PWM control, an error may increase due to its operation principle.

Outdoor use conditions

- These products are not a dustproof, waterproof, and splash proof construction. Please avoid the place with much dust. Moreover, please install in the place not exposed to rain nor water drop.
- Please do not install in the place where sunlight hits directly. Discoloration and degradation of a name plate, and deformation of the case by the surface temperature rise may occur.

■ Mounting and wiring

Please refer to this instruction manual for mounting and the wiring.



- Please refer to connection diagram for the wiring.
- Please avoid a hot line work.
- Please use an electrical wire size suitable with the rated current.
- Please check the tightening of the screw.

Preparation

When connecting this product directly to the main power supply, install an appropriate fuse externally. This product must be set before use. Please set correctly after reading this instruction manual.

Preparation before use

At the case of connect this product to the main power supply directly, please put the suitable fuse to the outside. This product must be set before use. Please set correctly after reading this instruction manual.

■ About dew condensation

If the temperature and humidity of an installation change rapidly when a product is a non-energization, the waterdrop by dew condensation may adhere to a display inner side. (The display filter and the LCD surface stick and the pattern of the shape of a circle or an ellipse occur.)

This phenomenon does not cause any trouble. Disappears when control power is applied for 2 hours.

■ Maintenance and inspection

- Inspection in energized state is dangerous.
- No replacement in periodic inspection.
- After wiring change and maintenance, attach the terminal cover.
- Please wipe off lightly with the dry soft cloth. Please do not use the organic solvent, chemicals, cleaners, etc., such as an alcohol, for cleaning.

The LCD may light up during cleaning on the LCD screen. This is a phenomenon that static electricity occurs in the filter. There is no problem with the product. Leave the unit as it is for a while, and the display goes out due to natural discharge.

Do not press the LCD screen strongly. Pressing the LCD screen may cause the filter and the liquid crystal surface to remain in contact (such as a round pattern).

■ Storage

Please be storage in a place that meets the following conditions.

- Operating temperature range: -20 to +70℃, Operating humidity range: 5 to 90%RH.
- ullet The average temperature (day) 40 $^{\circ}$ C or less.
- Place free of dust, corrosive gas, salt and oily smoke.
- Location that is not affected by vibration and shock.
- The aluminum electrolytic capacitor is used for a product. Please do the energization of the power supply within one year after shipment.

■ Countermeasures against troubles

If this product breaks down within the warranty period, it will be repairs by DAIICHI ELECTRONICS.

Disposal

Please dispose this product as industrial waste (non-combustible).
Mercury parts and a nickel-cadmium battery are not used for this product.

Warranty period

The warranty period of the product is one year after the date of delivery.

Operation

Be careful with the following cautions during use.

- Use the input within the rated range. Be careful since negligence of this caution may cause troubles of the unit.
- There is a function to hold the maximum value and the minimum value in this product.

 The blackout this value will not be cleared by a power supply reset. However, the minimum value may be updated in case input is not applied to a power up. For this reason, in order to recover previous minimum value, please apply input within 1 second after switching on a power supply.
- The maximum value, a minimum value measurement element

Measurement elements	Maximum value measurement	Minimum value measurement
Voltage, Frequency	0	0



- Be careful not to touch any terminal when power is applied to the unit.
- Don't disassemble or modify this unit without any previous permission of our company, otherwise the warranty does not apply to the unit any more. Also, modifications may cause troubles, a fire, or other accidents. For specifications change, etc., please contact us.

Setting

This unit requires setting and confirmation of the measuring range, etc. before use. Wrong setting, if any, causes malfunction of the unit. If setting should be wrong, neither measurement nor output becomes correct. Carefully read the instruction manual before setting the unit.

■ Default setting

The default settings are as specified below at the delivery time.

Please set them according to the working conditions.

The input circuit of this product is the common use of 3-phase 3-wire (3P3W), 1-phase 2-wire (1P2W), and 1-phase 3-wire (1P3W). In case an input circuit is designated at the case of an order, it is shipped by the default value of the designated input circuit. And, in case it does not do designation of the input circuit (with no designation), it is shipped by the default value of 3-phase 3-wire (110V).

The unit will be delivered with your specified setting values, if so specified.

No.	Setting item (2)(3)		3-phase 3-wire	1-phase 3-wire	1-phase
INO.	Setting	g Itelii ()()	110V input 220V input	(R-N-T)	110V input 220V input
		Pattern	Pattern 1	Pattern 1	Pattern 1
		Main monitor	V(RS)	V(RN)	V
1	Display	Sub monitor (Left)	V(ST)	V(TN)	None
ı	combination	Sub monitor (Center)	None	None	None
		Sub monitor (Right)	V(TR)	V(RT)	None
		Bar graph	V(RS)	V(RN)	V
		Factor	Voltage (OR of each Voltage (OR of each		Voltage
2	Alarm output	ractor	line voltage)	line voltage)	Vullage
2	(1)	Reset method	AUTO〈自動復帰〉	AUTO〈自動復帰〉	AUTO〈自動復帰〉
		Contact delay time	0 second〈秒〉	0 second〈秒〉	0 second〈秒〉
2	Instant measurement	Voltage upper limit	OFF	OFF	OFF
3	detection	Voltage lower limit	OFF	OFF	OFF
1	Backlight	Action	AUT0	AUT0	AUT0
4	Dackingfil	Brightness	3 (Middle)	3 (Middle)	3 (Middle)

No.	Setting item (2)(3)			3-phase	3-wire	1-phase 3-wire	1-р	hase
INO.	Setting) Lem (-)(-)	110V input	220V input	(R-N-T)	110V input	220V input
		Voltage ra	inge	6600V	220. OV	110. OV	3300V	220. OV
	Maaguramant	Digit numbe	er of voltage range	4 digits		4 digits	4 digits	
5	Measurement	Frequency	range	45.0 to 65	5. OHz	45.0 to 65.0Hz	45.0 to 65	5. 0Hz
	range	Digit numb	er of frequency	2 diaita		2 digita	2 digita	
		range		3 digits		3 digits	3 digits	
		Output ele	ment 1	V(RS)		V(RN)	V	
6	Analog output	Output ele	ement 2	V(ST)		V(TN)	0FF	
0	(1)	Output element 3		V(TR)		V(RT)	0FF	
		Low input cut		0FF		OFF	OFF	
7	External operati	ion input (1)	Alarm reset		Alarm reset	Alarm reset	
8	Measurement	Voltage		ON		ON	ON	
0	display ON/OFF	Frequency		ON		ON	ON	
9	Input circuit	Phase wire	change (2)	3P3W		1P3W (R-N-T)	1P2W	
9	Input circuit	Input volt	age (3)	110V	220V	150V	110V	220V
		Output 1	Bias adjustment	0.0%		0.0%	0.0%	
	Analag autnut	υμιρμί Ι	Span adjustment	100.0%		100.0%	100.0%	
10	Analog output	Output 2	Bias adjustment	0.0%		0.0%	0.0%	
10	adjustment (¹)	Output 2	Span adjustment	100.0%		100.0%	100.0%	
	()	Output 3	Bias adjustment	0.0%		0.0%	0.0%	
		υμιρμί 3	Span adjustment	100.0%		100.0%	100.0%	

Note(1) A setting item is not displayed in case there is no corresponding option.


Note(2) When the input circuit phase line switching setting is changed, the setting values of setting 1 and setting 2 (No. 1 to 8 in the table) return to the default setting values of the switched phase line. However, the value of setting 3 (No. 9, 10 in the table) does not return to the initial setting.

Note(3) When phase wire change setting of an input circuit is set as 3P3W (or 1P2W) and the input voltage setting is changed, the voltage range returns to the default value of the phase wire.

(For example: In case of 3P3W, 6600V at the case of 110V setting, 220V at the case of 220V setting.)

■ Explanation of LCD.

This product (hardware model D) has the part displayed in Japanese. Please refer to explanation of a display.

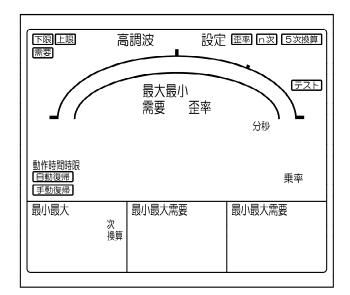

下限:Lower limit 上限:Upper limit 需要:Demand 高調波:Harmonic 設定:Set

歪率:Distortion factor

n次:n th

5 次換算:5th conversion

テスト:Test 最大:Maximum 最小:Minimum 分:Minute 秒:Second

動作時間:Operating time 時限:Time interval 自動復帰:Automatic reset 手動復帰:Manual reset 乗率:Multiplying factor

Content

Safety concerns ·····	1
1. Product outline 1.1 Usage of product ······	5
1.2 Features of product ······	5
1.3 Composition of type ······	5
2. The name and function of each part ······	6
3. Preparation	
3.1 Installation ·····	
3.2 Connections ·····	8
4. Operation ·····	
4.1 The screen change and function by switch operation ·····	10
4.2 The kind of display ·····	11
4.2.1 Measurement display ······	11
4.2.2 Alarm detection display ·····	12
4.2.3 Setting display ·····	13
4.3 Operation ·····	
4.3.1 The main monitor display factor changes ······	14
4.3.2 Line (phase) display change ······	14
4.3.3 Setting value check ······	15
4.3.4 Setting mode ·····	16
4. 3. 5 Reset	17
5. Setting	
5.1 Function table ·····	19
5.2 Setting table ·····	
5.3 Setting in detail explanation ·····	25
5.3.1 Setting mode 1 ·····	25
5.3.2 Setting mode 2 ·····	30
5.3.3 Setting mode 3 ·····	
6. Specification	
6.1 Specification and intrinsic error ······	36
6.2 Performance ·····	37
6.3 Option	39
7. Maintenance and check	
7.1 Trouble shooting ·····	40
7. 2 Test	41

1. Product outline

1.1 Usage of product

This single unit can measure and monitor voltage $\times 3$, frequency.


It is optimum for voltage measurement of a power receiving, a bus, and a low voltage system.

The intensive monitor doubled with the system by option (analog output, alarm output, external operation input) addendum is possible.


1.2 Features of product

- This product is 3-phase 3-wire, 1-phase 2-wire, 1-phase 3-wire common type. Product inventory can be standardized.
- Bar graph 1 measurement and digital 4 measurement are displayed simultaneously.
- Analog output 3 circuit and contact output can be taken out. (Option)
 And, an output element can be selected by setting.
- External operation inputs are possible of reset. (Option)
 Choice of an alarm output, the maximum/minimum value, and an alarm output, and the maximum/minimum value is possible at setting.
- Power supply is AC85 to 264V, DC80 to 143V (for both AC and DC uses).
- The mounting method of this unit is compatible with the mounting method of conventional 110 square mechanical meter. This unit is mounted at 2 diagonal points.
- With backlight (white LED backlight) function.
 In addition, the selection of the on / off / auto off and, you can set the brightness.

1.3 Composition of type

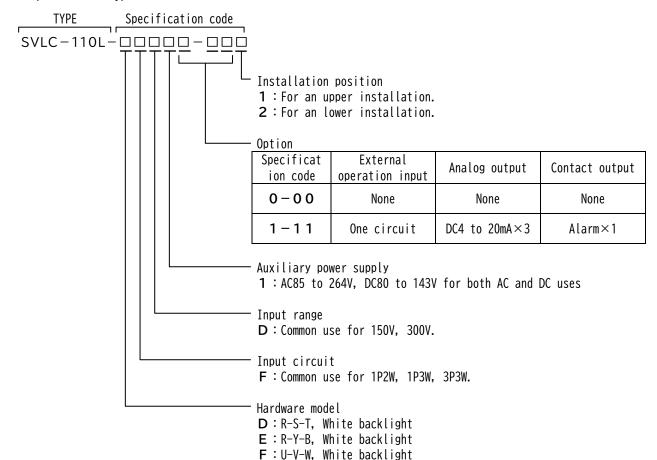

2. The name and function of each part

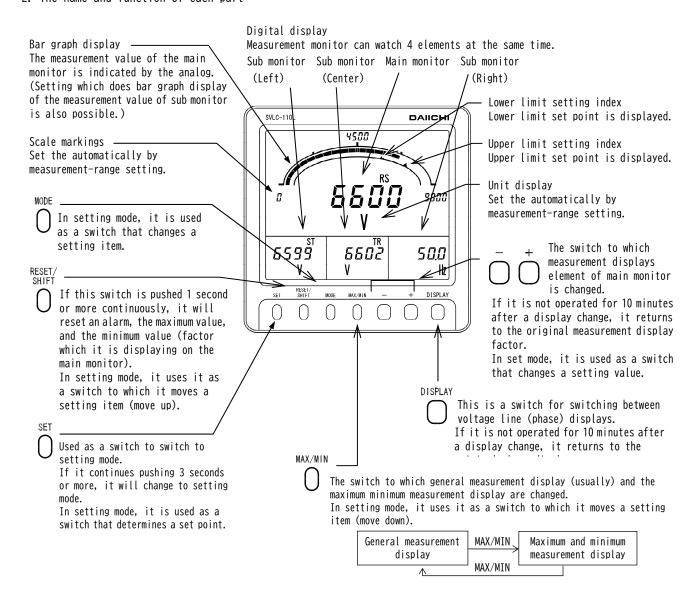


3. Preparation

3.1 Installation


Mount the unit by the attached M5 nuts to a panel of thinner than 10mm, referring to the following external dimensions drawing and panel cutout. Fasten these nuts with tightening torque 2.0 to 2.5N·m.

Dimension diagram

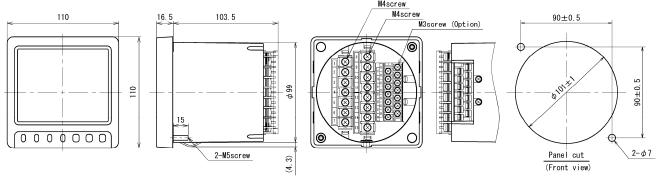


Caution on handling Mount the LCD to obtain an optimum angle, since the contrast changes according to the monitoring angle.


(1) For upper case installation

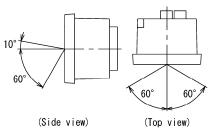

(2) For lower case installation

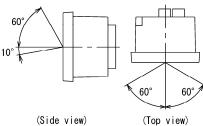


(3) Wide viewing angle model

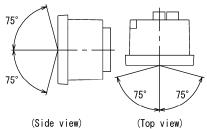

Installation

- (1) A product is put in a cut hole of a panel from a front. A body is inserted until it exceeds retaining stopper of the lower base.
- (2) Please fix a product certainly with attached M5 flange nut for installation. Please give a tightening torque as 2.0 to 2.5N·m.

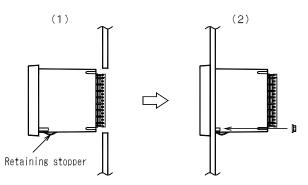


3.2 Connections


Please perform connection after referring to the following wiring diagram.

- Connection drawing (5)
- (1) 1P2W, Analog output.

(2) 1P3W, Analog output.

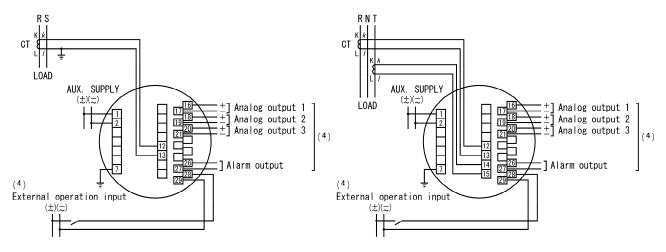

(3) 3P3W, Analog output.

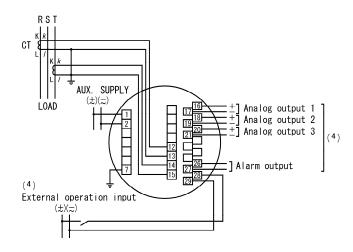

- Note(4) Analog output, alarm output, external operation input is an option.
- Note(5) In case of low-voltage circuit, secondary side earthing of VT is unnecessary.


 And, VT is unnecessary in case it used 110V or direct 220V.

Caution on connection

- (1) Mount the terminal cover without fail for safety after the end of connections.
- (2) Separate the input wiring and output wiring from each other without fail, and take a preventive measure against malfunction due to external noises.
- (3) Connect the grounding terminal E (No. 7 terminal) to the ground without fail for enhancing the shield effect. Keep the grounding resistance between the grounding terminal and the ground to be lower than 100Ω .
- (4) Keep a distance of more than 30cm between this unit and the circuit breaker as well as between this unit and the relay contact signal line.
- (5) No protection is necessary for this unit even if the transmission line may be affected by an induced lightning surge or the like when transmitting an analog output to the receiver. Mount an about 500V SPD (arrester) or the like between the line surge protector and the ground as well as between the transmission line and the ground on the receiver side for the purpose of protecting the devices on the receiver side.
- (6) When connecting an inductive load to the alarm output, it is recommended that a surge killer be installed externally. Without a surge killer, the life of the contacts may be shortened.

4. Operation

The function of switch

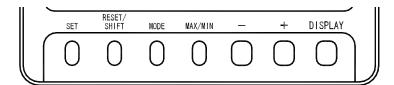

Switch	Function
SET	If it continues pushing 3 seconds or more, it will change to setting mode. In setting mode, it is used for the determination of a set point.
Various kinds of alarms are reset. The maximum value and the minimum value are reset. The maximum minimum measurement display. In setting mode, it uses it as a switch to which it moves (move up) a setting item. MAX/MIN The usual measurement display and maximum value or minimum value display are change In setting mode, it uses it as a switch to which it moves (move down) a setting item. The measurement display factor of the main monitor is changed. In setting mode, it is used for changing of a set point. DISPLAY The line (phase) display of voltage is changed. Use this to exit the setting mode restore the display combination of measurement elements.	

Convenient functions

- (1) In case a measurement changes or a line (phase) change is performed and the original screen composition is not clear anymore, DISPLAY is pushed for more than 3 seconds or it's no-operation for 10 minutes and returns to original screen structure.
- (2) If a measurement change is performed and the original main monitor display is not clear anymore. Press and hold + or for more than 3 seconds, or do not operate the device for 10 minutes to return to the original measurement display.
- (3) Even if it stops operation with setting mode, it returns to the display mode in 10 minutes.


7 segment displays

This product shows the guidance in various settings using 7 segment displays besides a display of a measurement value. A digital readout and 7 segment displays corresponding to each alphabet are shown in the following.

А	B(b)	С	D(d)	Ε	F	G	Н	I	J	К	L	М
H	<u> </u>	<u></u>	<u>'</u>	E	F		-	1	Non-dis play	Non-dis play	1	Ī
N(n)	0(0)	Р	Q(q)	R(r)	S	T(t)	U(u)	V	W	Х	<i>Y(y)</i>	Z
		,-,	,-,		, —	•				Non dia		_
171	口	<i>i</i> -'	' -i'		ニ	上	<u></u>	Image: Control of the	'-'	Non-dis play	'	_
0	1	2	3	4	5	6	7	8	9		<u>'</u>	_

4.1 The screen changes and function by switch operation.

This product changes various screens by switch operation. Here, the change step of the screen by switch operation is explained.

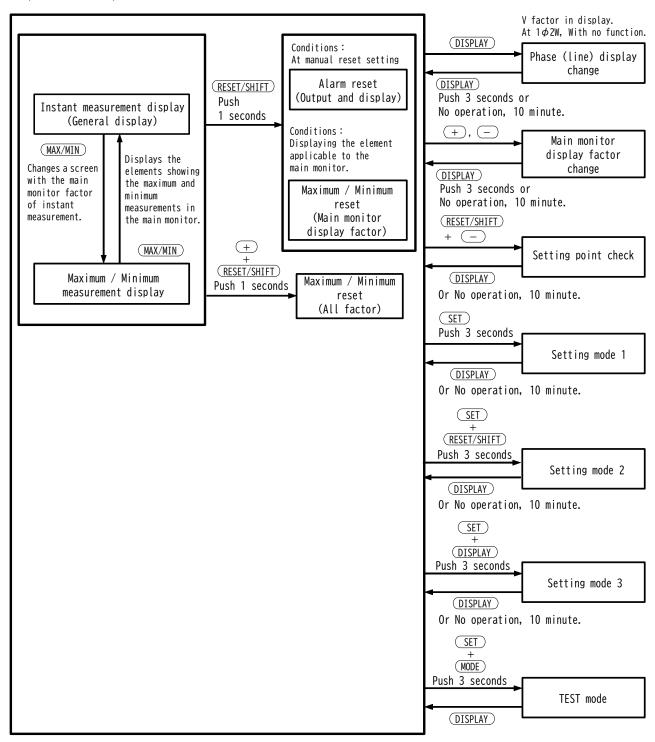

4.2 The kind of display

4.2.1 Measurement display


The change of the measurement display factor of the main monitor by switch operation and the change of the line / phase display of voltage is possible (temporarily).

In a general measurement display, if switch operation is not performed for 10 minutes after changing a display factor, it returns to the original measurement display factor automatically.

Voltage, frequency, etc. indicate the measurement value of four factors by the maximum.

Setting which always displays a measurement factor is possible. And, it is possible to change to a display of the maximum value and the minimum value, about the measurement factor which performs holding of the maximum value and the minimum value by switch operation.

These maximum values and the minimum value are reset by switch operation (it updates to the instantaneous value at the time). In addition, as for the maximum value and the minimum value, power-supply reset is not cleared either. And, this display is held by even after 10 minutes of switch non-operation.

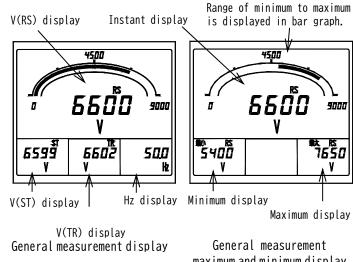

maximum and minimum display

• The example of a measurement display of each measurement factor (Main monitor)


Measurement factor	Example of display
Voltage	7200 9000
V	V
Frequency	\$\$\$
Hz	45 50.0 55

4.2.2 Alarm detection display


Display was voltage measurement becomes more than a upper limit setting value or less than a lower limit setting value.

If the voltage is being indicated by measurement under the main monitor or the sub-monitor, a measurement value display is flicker.

And, if the line (phase) set as the alarm output element detects, H, or L V flicker-indicates.

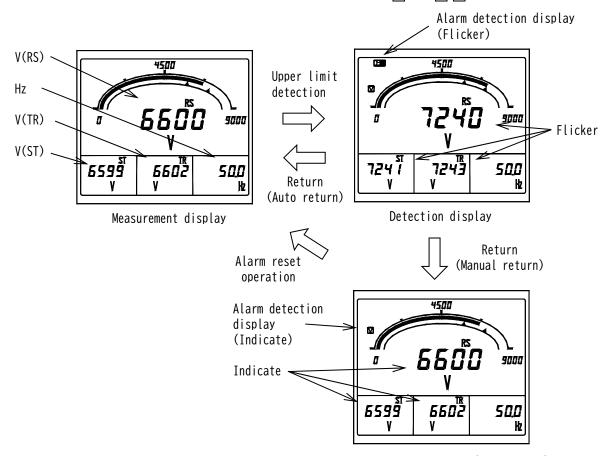

If the return method is manual reset setting, even if it returns from upper limit (lower limit) detection, an alarm detection display is held. The return in this case needs alarm reset operation. Please refer to "4.3.5 Reset" for alarm reset.

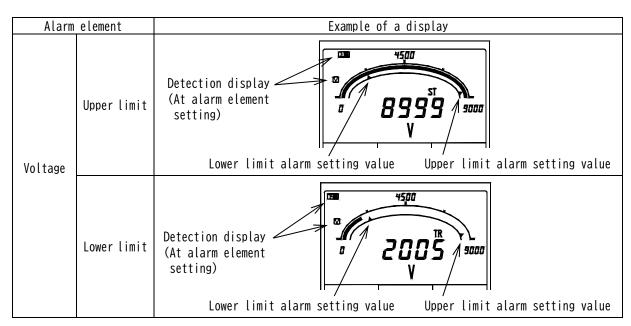


4.2.3 Setting display

This is the display when making various settings.

There are three types of setting modes according to the contents of a setting.


Operation and the contents of setting (detail) in setting mode, please refer to "5 Setting".

① Setting mode 1 Setting of a measurement display factor, an alarm output, and an alarm value, and backlight is performed. And, an alarm output can be tested in this setting mode.

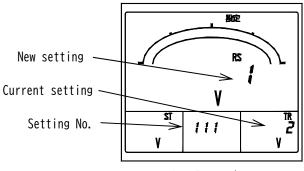


Setting mode 1 (No.111 Display pattern)

② Setting mode 2 Setting of measurement range, analog output, external operation input, and measurement display ON/OFF is performed. And, it can initialize settings in this setting mode.

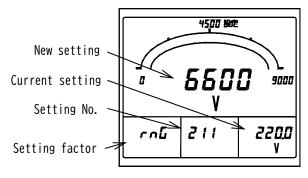

Setting mode 2 (No.211 Voltage range)

Setting mode 3 Setting of an input circuit is performed. And, analog output can be adjusted in this setting mode.

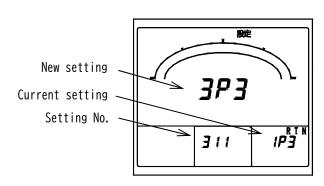


Setting mode 3 (No.311 Input circuit phase wire change)

4.3 Operation

4.3.1 The main monitor display factor changes

The measurement display factor of the main monitor is changed. A change is performed by + -. A measurement display and maximum display, minimum display can also perform this operation. After changing a measurement display factor, if a switch is not operated for 10 minutes, it will return to the original measurement display factor automatically.

In a maximum display and minimum display, even if a switch is not operated for 10 minutes, it does not return to the original display.

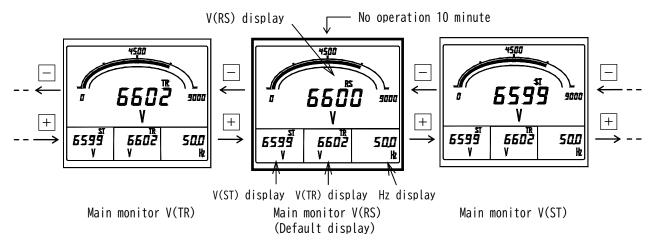

4.3.2 Line (phase) display change (3-phase 3-wire, 1-phase 3-wire)


Line and phase display of voltage is changed. (Everything which is being indicated.)

A change is performed by DISPLAY.

A measurement display and maximum display, minimum display can also perform this operation.

In addition, after changing a line and phase display, if a switch is not operated for 10 minutes, it will return to the original phase display automatically.

In a maximum display and minimum display, even if a switch is not operated for 10 minutes, it does not return to the original display.

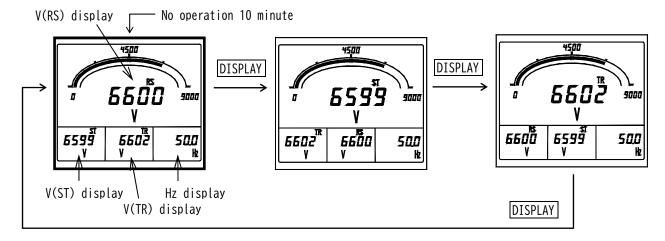


4.3.3 Setting value check

The voltage range (primary voltage), and an alarm-output set point are checked. Check is RESET/SHIFT and are pushed simultaneously and performed.

The change of a set point is carries out by + and -.

DISPLAY is pushed in case it returns to the original measurement display.

And, if a switch is not operated for 10 seconds after a set point check, it will return to the original measurement display automatically.

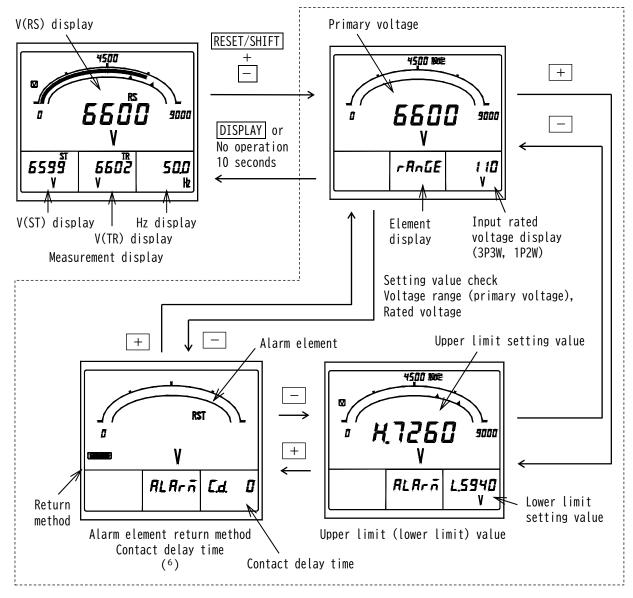

Note(6) Not displayed if there is no alarm output option.


4.3.4 Setting mode

Various kinds of setting are performed. Setting mode is three types, and operations are different.

DISPLAY is pushed in case it returns to the original measurement display. And, if a switch is not operated for 10 minutes after a set point check, it will return to the original measurement display automatically. Operation and the contents of setting (detail) in setting mode, please refer to "5 Setting".

- Setting mode 1: Press SET for longer than 3 seconds.
- Setting mode 2: Press SET and RESET/SHIFT together for longer than 3 seconds.
- · Setting mode 3: Press SET and DISPLAY together for longer than 3 seconds.

<Reference> This operation can be performed on the measurement display and the maximum/minimum display.

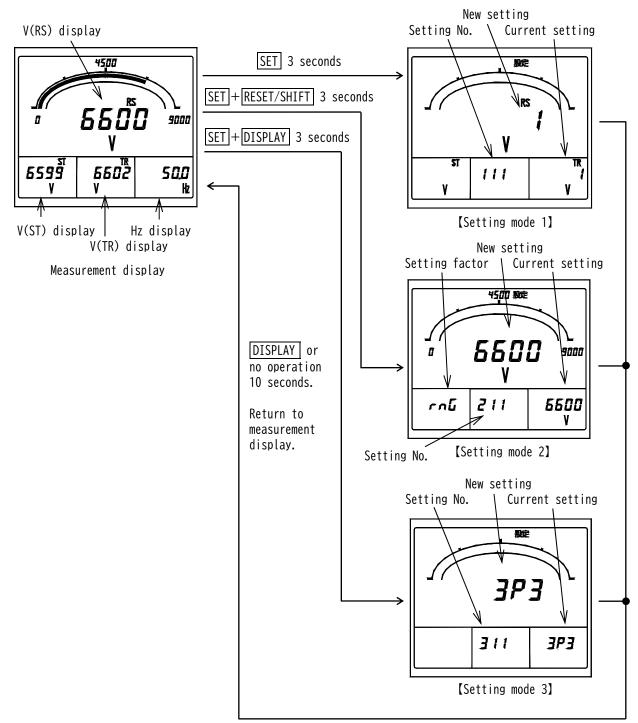

4.3.5 Reset

Various kinds of reset are performed. The kind of reset is as follows and operations are different, respectively. Reset of maximum value and minimum value (it updates to the instantaneous value at the time), Alarm-output reset (OFF of an alarm output (at the case of manual reset setting)). And, the operation from each measurement display constitutes conditions at each reset.


(1) Alarm reset

In case an alarm return method is set to "HOLD (manual return)", an alarm output is reset (output OFF). (With an alarm-output option) However, an output is not turned off by this operation, in case an alarm continues and it has caused. And, this operation is unnecessary if an alarm return method is set as "AUTO (automatic return)". (An output is also OFF to an alarm return.)

In addition, setting can perform same operation in external operation input.

Please refer to "5.3.2 Setting mode 2 (3) external operation input setting" for the setting method. Please refer to "6.3 Option" for the external operation input.

① Press RESET/SHIFT for at least one second while displaying the measurement or maximum/minimum measurement.

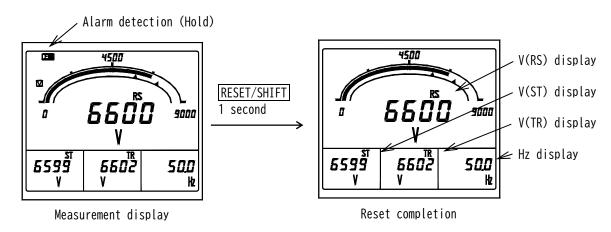


(2) Maximum value and minimum value reset.

Reset of the various measurement values of maximum value and minimum value is performed. This reset has two types of methods. (How to perform according to a measurement factor individual. How to reset all maximum values and minimum values by package.)

- a) Individual reset
 - Only the specified maximum/minimum values will be reset.
 - This operation will not reset other maximum or minimum values.
 - ① Displays the measurement element to reset on the main monitor. (By measurement display or maximum and minimum measurement display)
 - ② Press RESET/SHIFT for longer than 1 seconds.

<Caution> Please be sure to perform this operation after displaying the maximum value and minimum value measurement factor to reset. And, if the maximum value and minimum value reset are performed, the alarm output of detection will also be reset.

Instant display. Display the minimum to maximum range as a bar graph.

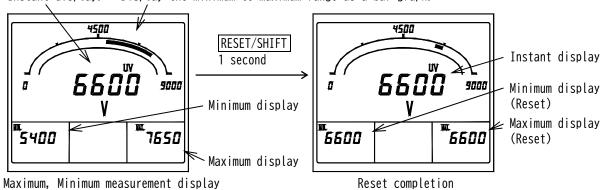

b) All reset of maximum value and minimum value.


Reset all maximum and minimum values.

In addition, settings can perform same operation in external operation input.

Please refer to "5.3.2 Setting mode 2 (3) external operation input setting" for the setting method. Please refer to "6.3 Option" for the external operation input.

① By measurement display and the maximum and minimum measurement display, it continues pushing RESET/SHIFT and + 1 second or more simultaneously.

Instant display. Display the minimum to maximum range as a bar graph.

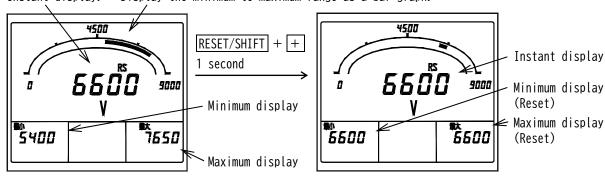

Maximum, Minimum measurement display

Reset completion

(3) All reset of alarm reset and maximum value and minimum value.

Alarms and all maximum/minimum values can be reset via external operation input.

Please refer to "5.3.2 Setting mode 2 (3) external operation input setting" for the setting method. Please refer to "6.3 Option" for the external operation input.

5. Setting

- < Caution > -

When changing the input circuit setting, please be sure to perform a setup from an input circuit setting in the setting mode 3. After changing the other setting, when the input circuit setting is changed the set value returns to default value (default value of a changed input circuit).

5.1 Function table

This product has each function setting with a front switch.

<Caution> In case the input circuit is not designated at the case of an order, it is shipping in the default
value of 3-phase 3-wire 110V input.

Setting mode 1. Function table

Setting No.	Function	Functional description	Default setting	Important setting	Page
111	Display pattern	Set the display combination pattern of the digital 4 displays and bar graph display.	Pattern 1	0	26, 27
112	Main monitor	Set the display factor of digital main monitor.	3P3W V(RS) 1P3W V(RN) 1P2W V	0	26, 27
113	Sub monitor (Left)	Set the display factor of digital sub monitor (left).	3P3W V(ST) 1P3W V(TN) 1P2W None	0	26, 27
114	Sub monitor (Center)	Set the display factor of digital sub monitor (center).	None	0	26, 27
115	Sub monitor (Right)	Set the display factor of digital sub monitor (right).	3P3W V(TR) 1P3W V(RT) 1P2W None	0	26, 27
116	Bar graph	Set the display factor of bar graph.	3P3W V(RS) 1P3W V(RN) 1P2W V	0	26, 27
121AL (7)	Alarm element	Set the output element of alarm.	3P3W V (OR detection of each line (phase) voltage) V (OR detection of each line (phase) voltage) 1P2W V	0	28
122AL (7)	Alarm reset method	Set the output action at the case of an alarm reset.	AUTO (Automatic reset)		28
123AL (7)	Alarm contact delay time	Set the contact delay time of alarm.	0 second		28
131H	Instant measurement voltage upper limit value	Set the upper limit alarm value of instant voltage.	OFF (No operation)		29
132L	Instant measurement voltage lower limit value	Set the lower limit alarm value of instant voltage.	OFF (No operation)		29
141	Backlight action	Set the ON/OFF of backlight.	AUTO OFF		29
142	Backlight brightness	Set the brightness of backlight.	3 (Middle)		29

Note(7) If there are no options, the settings will not be displayed.

Setting mode 2. Function table

Setting No.	Function	Functional description	Default setting	Important setting	Page
211	Voltage range	Set the voltage measurement range (primary voltage).	3P3W 6600V (9) 1P3W 110.0V 1P2W 3300V (9)	0	31
212	Digit number of voltage range	Set the digit number of voltage range.	3P3W 4 digits 1P3W 4 digits 1P2W 4 digits		31
213	Frequency range	Set the full-scale of frequency meter, and the output range of analog output.	45.0 to 65.0Hz		31
214	Digit number of frequency range	Set the digit number of significant figures of frequency range.	3 digits		31, 32
221A (⁸)	AO1 output element	Set the output element of AO2 (analog output 1).	3P3W V(RS) 1P3W V(RN) 1P2W V	0	32
222A (8)	AO2 output element	Set the output element of AO2 (analog output 2).	3P3W V(ST) 1P3W V(TN) 1P2W OFF	0	32
223A (8)	AO3 output element	Set the output element of AO3 (analog output 3).	3P3W V(TR) 1P3W V(RT) 1P2W OFF	0	32
224A (⁸)	Low input cut	Set the function which makes a lower limit the analog output at the case of a minute input (adequate to 0.5% or less) in analog output.	OFF (No operation)		32
231 (⁸)	External operation input function	Set the function of the external operation input.	Alarm reset	0	33
241	Voltage ON/OFF	Set the ON/OFF of voltage measurement display.	ON		33
242	Frequency ON/OFF	Set the ON/OFF of frequency measurement display.	ON		33
251	Set value initialization	Initialize the settings of setting 1 and setting 2 (return to the default settings). (The set value of setting 3 does not return to the default value)	_		33

Setting mode 3. Function table

Setting No.	Function	Functional description	Default setting	Important setting	Page
311	Input circuit phase wire change	Set the input circuit or phase wire.	3P3W 3P3W 1P3W 1P3W (R-N-T) 1P2W 1P2W	0	34
312	Input voltage	Set the input voltage / phase voltage full scale.	3P3W 110V 1P3W 150V 1P2W 110V	0	34, 35
321 (8)	AO1 BIAS adjustment	Set the BIAS value of AO1 (analog output 1).	0.0%		35
322 (8)	AO1 SPAN adjustment	Set the SPAN value of AO1 (analog output 1).	100.0%		35
323 (8)	AO2 BIAS adjustment	Set the BIAS value of AO2 (analog output 2).	0.0%		35
324 (⁸)	AO2 SPAN adjustment	Set the SPAN value of AO2 (analog output 2).	100.0%		35
325 (⁸)	AO3 BIAS adjustment	Set the BIAS value of AO3 (analog output 3).	0.0%		35
326 (8)	AO3 SPAN adjustment	Set the SPAN value of AO3 (analog output 3).	100.0%		35

Note(8) If there are no options, the settings will not be displayed. Note(9) For 220V input, it will be "220.0V (4 digits)".

5.2 Setting table

The setting item changes by the specification of a product, or the existence of an option.

(1) Important setting

Each parenthesized number shows a setting number and this number is displayed on the setting screen.

T.		_
Items	Setting and operation procedures	Page
Cat the phase wire	Press SET and DISPLAY together for longer than 3 seconds	
Set the phase wire of input circuit.	(311) Select an phase wire by + and - → Press SET for longer than 3 seconds →	34
(311)	Secret an phase wife by [1] and [1] \$\frac{1}{2} \text{ Freeze 101 toliger than 3 seconds \$\frac{1}{2}\$	34
	Selected phase wire is entered → Press DISPLAY → Returns to display mode.	
	Press SET and DISPLAY together for longer than 3 seconds → Press RESET/SHIFT →	
Set the input	(311) (312)	
voltage (phase	Select a input voltage (at 1P3W, phase voltage full-scale) by 🕂 and 🗔 ➡	24.25
voltage full scale).	Press SET → Selected input voltage (phase voltage full-scale) is entered →	34, 35
(312)	Treas SET P Secretar Imput Vertuge (phase Vertuge late seate) is entered p	
	Press DISPLAY → Returns to display mode.	
Set the	Press SET and RESET/SHIFT together for longer than 3 seconds →	
measurement range	(211)	
of voltmeter	Select a measuring range by + and - → Press SET →	31
(211)	Selected measuring range is entered → Press DISPLAY → Returns to display mode.	
	Press SET for longer than 3 seconds → Select the display pattern by + and -	
Set the display	(111)	
pattern (111)	→ Press SET → Selected display pattern is entered → Press DISPLAY →	26, 27
	Returns to display mode.	
Set the output	Press SET and RESET/SHIFT together for longer than 3 seconds → Press MODE → (211) (221A)	
factor of analog	Select an output element by + and - → Press SET →	32
output 1 (A01). (221A)		
(LLIN)	Selected output element is entered → Press DISPLAY → Returns to display mode.	
Set the output	Press SET and RESET/SHIFT together for longer than 3 seconds → Press MODE →	
element of analog	(211) (221A)	22
output 2 (AO2).	Press RESET/SHIFT → Select an output element by + and - → Press SET → (222A)	32
(222A)	Selected output element is entered → Press DISPLAY → Returns to display mode.	
	Press SET and RESET/SHIFT together for longer than 3 seconds → Press MODE →	
Set the output	(211) (221A)	
element of analog	Press RESET/SHIFT → Press RESET/SHIFT → Select an output element by + and -	20
output 3 (AO3).	(222A) (223A)	32
(223A)	→ Press SET → Selected output element is entered → Press DISPLAY →	
	Returns to display mode.	
	Press SET for longer than 3 seconds → Press MODE →	
Set the factor	(111) (121AL)	
of alarm output. (121AL)	Select an factor by + and - → Press SET → Selected factor is entered →	28
(IZIAL)	Press DISPLAY → Returns to display mode.	
Set the function	Press SET and RESET/SHIFT together for longer than 3 seconds → Press MODE → (211) (221A)	
of external	Press MODE → Select an function by + and - → Press SET →	33
operation input. (231)	(231)	
,	Selected function is entered → Press DISPLAY → Returns to display mode.	

(2) A combination except a display pattern. Each parenthesized number shows a setting number and this number is displayed on the setting screen.

Items	Setting and operation procedures	Page
	Press SET for longer than 3 seconds → Press RESET/SHIFT →	raye
Set the display factor of main monitor. (112)	(111) (112) Select an display factor by + and - → Press SET → Selected display factor is entered → Press DISPLAY → Returns to display mode.	26, 27
Set the display factor of sub monitor (left). (113)	Press SET for longer than 3 seconds → Press RESET/SHIFT → Press RESET/SHIFT (111) (112) → Select an display factor by + and - → Press SET → (113) Selected display factor is entered → Press DISPLAY → Returns to display mode.	26, 27
Set the display factor of sub monitor (center). (114)	Press SET for longer than 3 seconds → Press RESET/SHIFT → Press RESET/SHIFT (111) (112) → Press RESET/SHIFT → Select an display factor by + and - → Press SET → (113) (114) Selected display factor is entered → Press DISPLAY → Returns to display mode.	26, 27
Set the display factor of sub monitor (right).	Press SET for longer than 3 seconds → Press RESET/SHIFT → Press RESET/SHIFT (111) (112) → Press RESET/SHIFT → Press RESET/SHIFT → (113) (114) (115) Select an display factor by + and - → Press SET → Selected display factor is entered → Press DISPLAY → Returns to display mode.	26, 27
Set the display factor of bar graph. (116)	Press SET for longer than 3 seconds → Press RESET/SHIFT → Press RESET/SHIFT (111) (112) → Press RESET/SHIFT → Press RESET/SHIFT → Press RESET/SHIFT → (113) (114) (115) (116) Select an display factor by + and - (If a sub monitor is selected, an underbar will be displayed on the bottom of a digital display.) → Press SET → Selected display factor is entered → Press DISPLAY → Returns to display mode.	26, 27

(3) Setting of frequency measurement range.

Each parenthesized number shows a setting number and this number is displayed on the setting screen.

Items	Setting and operation procedures	Page
Set the frequency measurement range. (213)	Press SET and RESET/SHIFT together for longer than 3 seconds → (211) Press RESET/SHIFT → Press RESET/SHIFT → (212) (213) Select a measurement range by + and - → Press SET →	31
	Selected measurement range is entered → Press DISPLAY → Returns to display mode.	

(4) Setting of range digit number.

Each parenthesized number shows a setting number and this number is displayed on the setting screen.

Items	Setting and operation procedures	Page
Set the digit number of voltage range. (212)	Press SET and RESET/SHIFT together for longer than 3 seconds → (211) Press RESET/SHIFT → Press RESET/SHIFT → Select a digit number by + and - → (212) (213) Press SET → Selected digit number is entered → Press DISPLAY → Returns to display mode.	31
Set the digit number of frequency range. (214)	Press SET and RESET/SHIFT together for longer than 3 seconds → (211) Press RESET/SHIFT → Press RESET/SHIFT → Press RESET/SHIFT → (212) (213) (214) Select a digit number by + and - → Press SET → Selected digit number is entered → Press DISPLAY → Returns to display mode.	31, 32

(5) Setting of analog output.

Each parenthesized number shows a setting number and this number is displayed on the setting screen.

Items	Setting and operation procedures	Page
Set the output cut function at the case in minute input (0.5% or less) of analog output. (224A)	Press SET and RESET/SHIFT together for longer than 3 seconds → Press MODE → (211) (221A) Press RESET/SHIFT → Press RESET/SHIFT → Press RESET/SHIFT → (222A) (223A) (224A) Select a low Input cut ON/OFF by + and - → Press SET → Selected action is entered → Press DISPLAY → Returns to display mode.	32

(6) Setting of alarm output.

Each parenthesized number shows a setting number and this number is displayed on the setting screen.

Items	Setting and operation procedures	Page
Set the reset method of alarm output. (122AL)	Press SET for longer than 3 seconds → Press MODE → Press RESET/SHIFT → (111) (121AL) (122AL) Select a reset method by + and - → Press SET → The selected reset method is entered → Press DISPLAY → Returns to display mode.	28
Set the contact delay time of alarm output. (123AL)	Press SET for longer than 3 seconds → Press MODE → Press RESET/SHIFT → (111) (121AL) (122AL) Press RESET/SHIFT → Select an contact delay time by + and - → Press SET → (123AL) The selected contact delay time is entered → Press DISPLAY → Returns to display mode.	28

(7) Voltage detection setting. Each parenthesized number shows a setting number and this number is displayed on the setting screen.

Items	Setting and operation procedures	Page
Set the upper limit alarm value of instant voltage. (131H)	Press SET for longer than 3 seconds → Press MODE → (111) (121AL) Press MODE (It is operation needlessness if there is no option) → (131H) Select a upper limit alarm value by + and - → Press SET → Selected upper limit alarm value is entered → Press DISPLAY → Returns to display mode.	29
Set the lower limit alarm value of instant voltage. (132L)	Press SET for longer than 3 seconds → Press MODE → (111) (121AL) Press MODE (It is operation needlessness if there is no option) → (131H) Press RESET/SHIFT → Select a lower limit alarm value by + and - → Press SET (132L) → Selected lower limit alarm value is entered → Press DISPLAY → Returns to display mode.	29


(8) Backlight setting

Each parenthesized number shows a setting number and this number is displayed on the setting screen.

Items	Setting and operation procedures	Page
Set the action of backlight. (141)	Press SET for longer than 3 seconds → Press MODE → (111) (121AL) Press MODE (If there are no options, this operation is not necessary.) → (131H) Press MODE → Select a backlight action by + and - → Press SET → (141) Selected backlight action is entered → Press DISPLAY → Returns to display mode.	29
Set the brightness of backlight. (142) [At white backlight]	Press SET for longer than 3 seconds → Press MODE → (111) (121AL) Press MODE (If there are no options, this operation is not necessary.) → (131H) Press MODE → Press RESET/SHIFT → Select a brightness by + and - → (141) (142) Press SET → Selected backlight brightness is entered → Press DISPLAY → Returns to display mode.	29

5.3 Setting in detail explanation

5.3.1 Setting mode 1

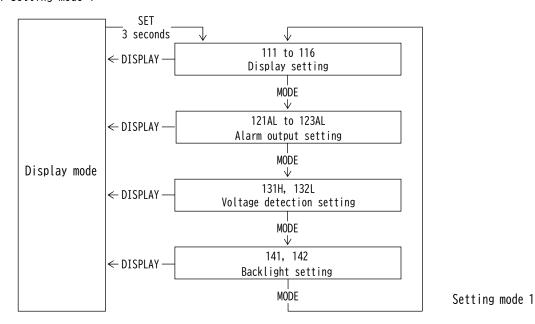

Setting mode 1 is selected by pressing <u>SET</u> switch for longer than 3 seconds. Pushing <u>MODE</u> switch performs movement of setting item.

The present mode can be returned to the display mode by pressing <code>DISPLAY</code> switch.

(1) 111 to 116 Display combination setting

• 3-phase 3-wire

No.	Pattern No.	Main monitor	Sub monitor (Left)	Sub monitor (Center)	Sub monitor (Right)	Bar graph
1	Pattern 1	V(RS)	V(ST)	None	V(TR)	V(RS)
2	Pattern 2	V(RS)	V(ST)	V(TR)	Hz	V(RS)

• Displays set factor (3-phase 3-wire)

Main monitor	V(RS), V(ST), V(TR), Hz
Sub monitor (Left)	V(RS), V(ST), V(TR)
Sub monitor (Center)	V(RS), V(ST), V(TR)
Sub monitor (Right)	V(RS), V(ST), V(TR), Hz
Bar graph	V(RS), V(ST), V(TR), Hz

• Line change (3-phase 3-wire)

$$\rightarrow$$
 V(RS) \rightarrow V(ST) \rightarrow V(TR) $-$ (10)

Measurement factor change (Measurement display mode)

$$\rightarrow$$
 V(RS) \rightarrow V(ST) \rightarrow V(TR) \rightarrow Hz \rightarrow None $-$

Note(10) Press DISPLAY to switch.

● 1-phase 3-wire (12)

No.	Pattern No.	Main monitor	Sub monitor (Left)	Sub monitor (Center)	Sub monitor (Right)	Bar graph
1	Pattern 1	V(RN)	V(TN)	None	V(RT)	V(RN)
2	Pattern 2	V(RN)	V(TN)	V(RT)	Hz	V(RN)

Displays set factor (1-phase 3-wire)

Main monitor	V(RN), V(TN), V(RT), Hz
Sub monitor (Left)	V(RN), V(TN), V(RT)
Sub monitor (Center)	V(RN), V(TN), V(RT)
Sub monitor (Right)	V(RN), V(TN), V(RT), Hz
Bar graph	V(RN), V(TN), V(RT), Hz

● Phase change (1-phase 3-wire) (¹²)

• Measurement factor change (Measurement display mode) (12)

$$\rightarrow$$
 V(RN) \rightarrow V(TN) \rightarrow V(RT) \rightarrow Hz \rightarrow None \neg

Note(11) Press DISPLAY to switch.

Note(12) The case of 1-phase 3-wire (R-N-T).

The case of 1-phase 3-wire (R-S-N) is voltage (RN-SN-RS).

The case of 1-phase 3-wire (S-N-T) is voltage (SN-TN-ST).


● 1-phase 2-wire

No.	Pattern No.	Main monitor	Sub monitor (Left)	Sub monitor (Center)	Sub monitor (Right)	Bar graph
1	Pattern 1	V	None	None	None	V
2	Pattern 2	V	None	None	Hz	V


Displays set factor (1-phase 2-wire)

	Measurement	factor	change	(Measurement	displa	ay mode	(ڊ
--	-------------	--------	--------	--------------	--------	---------	----

Main monitor	V, Hz
Sub monitor (Left)	V
Sub monitor (Center)	V
Sub monitor (Right)	V, Hz
Bar graph	V, Hz

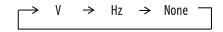

Display combination setting

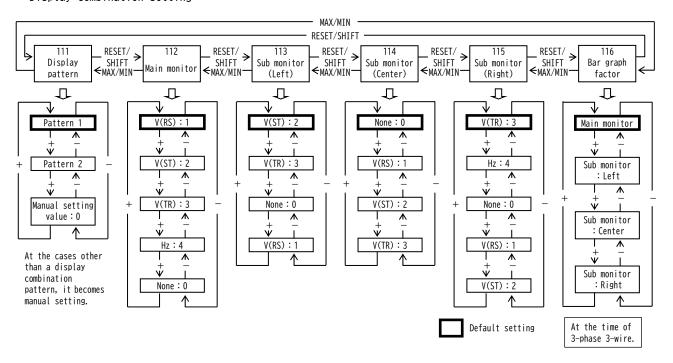



- ◆ 111 Display pattern Select the factors to be measured and monitored by 4 digital displays out of combination patterns. Set values are updated by SET.
- ◆ 112 to 115 Main monitor, Sub monitor (left), Sub monitor (center), Sub monitor (right)

Set these items for a display configuration other than combination patterns.

Set values are updated by SET.


◆ 116 Bar graph factor A factor being monitored in the main monitor is basically displayed by a bar graph. Set this item for displaying a factor being monitored on a sub monitor by bar graph. An underbar is attached to the digital display of the setting sub monitor. Set values are updated by SET.

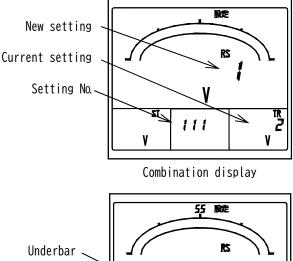

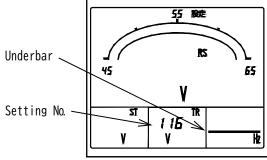

Bar graph factor


(2) 121AL to 123AL Alarm output setting [With option] Various settings and an output test are performed about alarm output.

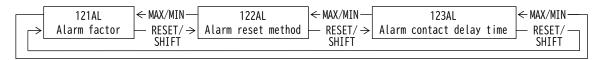


◆ 121AL Alarm output element setting


Set the factor of alarms outputs. Selection by + and -, set value is updated by SET.

Default setting: 1 [Voltage, OR of each line (phase)]

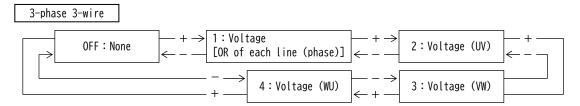

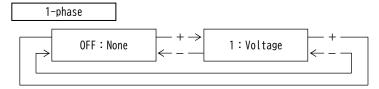


◆ 122AL Alarm reset method setting. Action at the case of a reset of alarm output can be selected from AUTO (automatic reset) and HOLD (manual reset). In "AUTO (automatic reset)", an alarm output is OFF according to a reset of an alarm. In "HOLD (manual reset)", even after an alarm reset, an output holds ON. Performs a return (output OFF) in RESET/SHIFT. Selection by + and , set value is updated by SET.

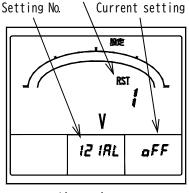

New setting

Alarm element

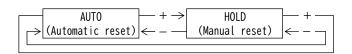

◆ 123AL Alarm contact delay time


<u>Default setting: AUTO (Automatic reset)</u>

Set the contact delay time of alarm. The setting range is 0 to 300 seconds (1 second step). Selection by $\boxed{+}$ and $\boxed{-}$, set value is updated by $\boxed{\text{SET}}$.

<u>Default setting: O second (With no contact delay)</u>

(3) 131H, 132L Voltage detection setting

Set the upper limit alarm value and lower limit alarm value of instant voltage.

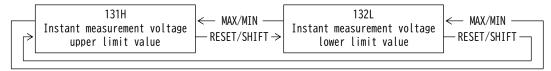

◆ 131H Instant measurement voltage upper limit value.
 132L Instant measurement voltage lower limit value.
 Set the upper limit alarm value and lower limit alarm value

Set the upper limit alarm value and lower limit alarm value of instant voltage.


The setting range is 30 to 150% (1% step) and OFF. (To full scale = 150%)

Selection by + and -, set value is updated by <u>SET</u>.

<u>Default setting: OFF (No operation) (upper limit</u>

value, lower limit value)OFF 80%

Setting No.

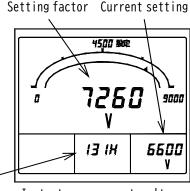

Instant measurement voltage upper limit value.

(4) 141, 142 Backlight setting

Set the action and brightness of backlight.




◆ 141 Backlight action

The backlight operation mode can be selected from ON (always on), AUTO (auto off), and OFF (always off).

If 5 minutes elapses without operating a switch in case it is set as "AUTO (auto off)", backlight will go out automatically. After that, backlight will be turned on if either of switches is operated.

Selection by + and -, set value is updated by $\overline{\text{SET}}$. Default setting: AUTO (Auto off)

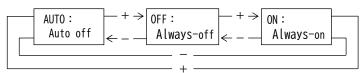


◆ 142 Backlight brightness

Backlight brightness can be selected in five levels from 1 to 5. Backlight becomes the darkest if it is set as "1".

Backlight becomes the <u>brightest</u> if it is set as "5".

Selection by + and -, set value is updated by $\overline{\text{SET}}$.

<u>Default setting:3 (Middle)</u>

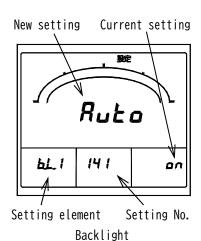


Setting Brightness

5 Bright

4 3
2 Dark

5.3.2 Setting mode 2

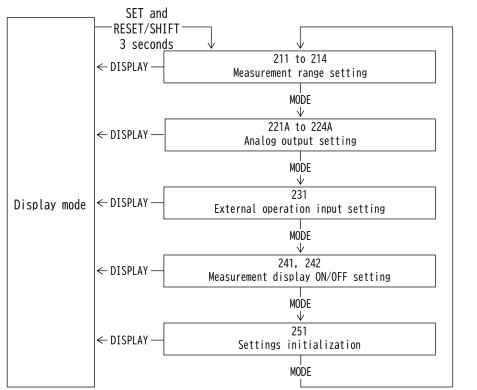

Setting mode 2


Setting mode 2 is selected by pressing SET and RESET/SHIFT switches continuously for longer than 3 seconds. Pushing MODE switch performs movement of setting item.

The present mode can be returned to the display mode by pressing DISPLAY switch.

< Caution >

If setting change should have been mistaken, a display and output of measurement are not obtained correctly. Therefore, users must not set. The setting item without the corresponding option is not displayed.


(1) 211 to 214 Measurement range setting Set the measurement range of each measurement factor.

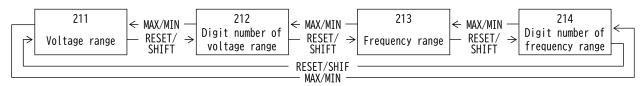

♦ 211 Voltage range

Set the voltage range (primary voltage). Selection by |+| and |-|, set value is updated by SET. Default setting: 6600V (3P3W, 110V input), 110.0V (1P3W), 3300V (1P2W, 110V input), 220.0V (3P3W/1P2W, 220V input)

Voltage measurement range J 150V (110V) 24kV (16.5kV/110V) 300V (220V, 220V/110V) 25kV (18.4kV/110V) 500V (380V/110V) 30kV (22kV/110V) 600V (440V/110V) 45kV (33kV/110V) 600V (460V/110V) 90kV (66kV/110V) 600V (480V/110V) 120kV (77kV/110V) 1200V (880V/110V) 150kV (110kV/110V) 1500V (1100V/110V) 180kV (132kV/110V) 2400V (1650V/110V) 210kV (154kV/110V) 3000V (2200V/110V) 270kV (187kV/110V) 4500V (3300V/110V) 300kV (220kV/110V) 9000V (6600V/110V) 400kV (275kV/110V) 15kV (11kV/110V) 500kV (380kV/110V) 18kV (13.2kV/110V) 750kV (550kV/110V) 18kV (13.8kV/110V)

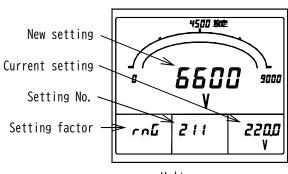

Voltage range


▶ 212 Digit number of voltage range Set the digit number of voltage range.


Selection by |+| and |-|, set value is updated by SETL

Default setting: 4 digits

The unit may be changed if the number of digits is changed.

Example) $6000V \longleftrightarrow 6.60kV$

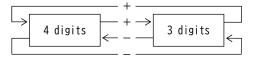

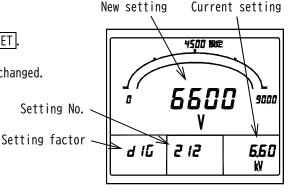

Digit number of voltage range

◆ 213 Frequency range


Set the frequency measurement range.


Selects a frequency range from 45.0 to 55.0Hz or 55.0 to 65.0Hz or 45.0 to 65.0Hz.

Change of this setting also sets the analog output range of frequency automatically.

Selection by |+| and |-|, set value is updated by SET.

Default setting: 45.0 to 65.0Hz

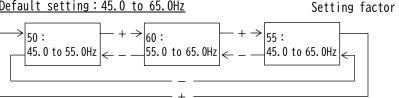

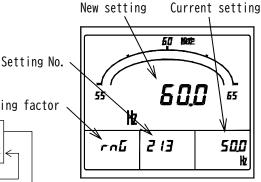


Frequency range

214 Digit number of frequency range New setting Current setting Set the digit number of frequency range. Selection by + and -, set value is updated by $\overline{\text{SET}}$. 50 股定 Default setting: 3 digits 50.00 45 55 3 digits 4 digits Setting No. 妝 Setting factor 2 14 d 16 500

Digit number of frequency range

(2) 221A to 224A Analog output setting [With option] Various settings of analog output is performed.

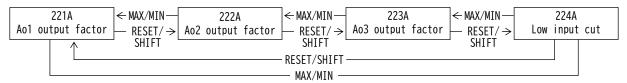

◆ 221A to 223A AO (analog output) 1 to 3 output element.

Set the output element of each analog output.

Selection by + and -, set value is updated by SET.

Current setting:


AO1 V(RS) (3P3W), V(RN) (1P3W R-N-T), V (1P2W)

AO2 V(ST) (3P3W), V(TN) (1P3W R-N-T), OFF (1P2W)

AO3 V(TR) (3P3W), V(RT) (1P3W R-N-T), OFF (1P2W)

AO3 V(TR) (3P3W), V(RT) (1P3W R-N-T), OFF (1P2W)

AO3 V(TR) (3P3W), V(RT) (1P3W R-N-T), OFF (1P2W)

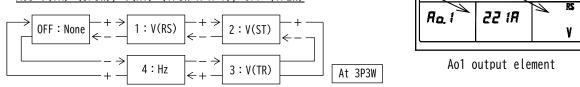


◆ 224A Low input cut

This function sets the output to the lower limit when the input is small, equivalent to 0.5% or less, at the analog output.

Select ON (use) or OFF (do not use).


Selection by $\lfloor + \rfloor$ and $\lfloor - \rfloor$, set value is updated by SET.


<u>Default setting: OFF (No operation)</u>

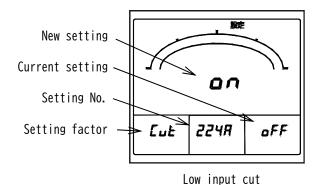

- (3) 231 External operation input setting [With option] Various settings of external operation input is performed.
 - ◆ 231 External operation input function The function of each external operation input (alarm reset, maximum / minimum reset, all reset) can be selected.

 Selection by + and -, set value is updated by SET.

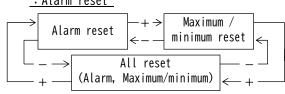

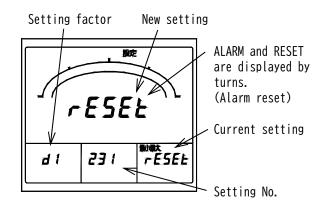


Voltage ON/OFF

· About the setting display in an external operation input function

Function	The contents of a display at the function setting	Current setting display point	New setting display point
Alarm reset	"ALARM" and "RESET" are displayed by turns by 7 segment display.		
Maximum / minimum reset	"MAX." and "MIN." of guidance and "RESET" are displayed by 7 segment display.	Sub monitor (right)	Main monitor
All reset	"ALL" and "RESET" are displayed by turns by 7 segment display.		


(4) 241, 242 Measurement ON/OFF setting New setting Current setting Measurement display ON/OFF setting of each measurement factor is performed. Selection by + and -, set value is updated by \overline{SET} . Default setting: ON (All measurement factors) Setting No. ← MAX/MIN -00 Voltage Frequency - RESET/SHIFT → RESET/SHIFT - MAX/MIN 241 oFF

- (5) 251 Settings initialization Initializes the each settings (return to a default setting).
 - ◆ 251 Settings initialization
 Initialize the settings of setting 1 and setting 2 (return to the default settings).
 Pushing SET for 3 seconds or longer to initialize the settings of setting 1 and setting 2.
 (The set value of setting 3 does not return to the default value)
 By pushing SET for 3 seconds, all the settings of setting 1 and setting 2 are initialized.

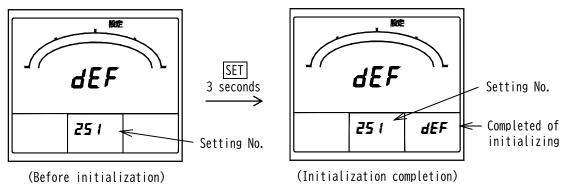

Initialization of setting value

5.3.3 Setting mode 3

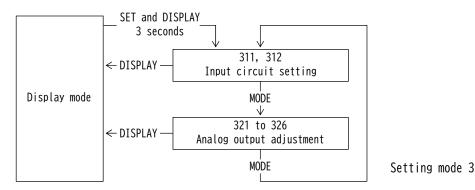

Setting mode 3 is selected by pressing <u>SET</u> and <u>DISPLAY</u> switches continuously for longer than 3 seconds. Pushing <u>MODE</u> switch performs movement of setting item.


The present mode can be returned to the display mode by pressing DISPLAY switch.

<Caution>

If setting change should have been mistaken, a display and output of measurement are not obtained correctly. Therefore, users must not set. The setting item without the corresponding option is not displayed.

(1) 311, 312 Input circuit setting

Set the phase wire of an input circuit, and an input voltage / phase voltage full scale.

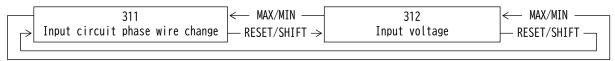


◆ 311 Input circuit phase wire change

Set the input circuit and phase wire.

Selection by + and -, set value is updated by pushing $\overline{\text{SET}}$


3 seconds or more.

Default setting: 3P3W (No designation)

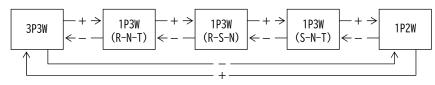

<Caution>

- If this setting is changed, all the settings of setting 1 and setting 2 will turn into a default setting of the input circuit after change.
- The right measurement cannot be performed if setting of actual connection and phase wire are different.

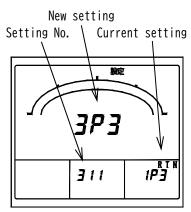

Input circuit phase wire change

◆ 312 Input voltage


Set the input voltage (3P3W, 1P2W) or phase voltage full-scale (1P3W).

In 3P3W/1P2W and 1P3W, the contents of a setting are different.


Selection by + and -, set value is updated by \overline{SET}

<u>Default setting: 150V (1P3W)</u>

<u>Default setting: 110V (3P3W, 1P2W or no designation)</u>

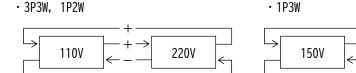


Setting of 300V, Output of phase voltage is ACO to 150V/DC4 to 12mA. Setting of 150V, Output of phase voltage is ACO to 150V/DC4 to 20mA.

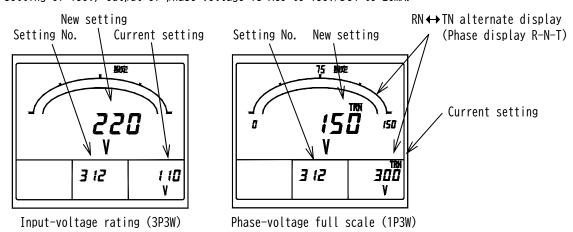

300V

(2) 321 to 326 Analog output adjustment [With option] The bias and span of each analog output are adjusted.

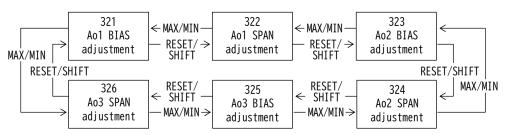

- ◆ 321 AO (Analog output) 1 bias adjustment,
 - 323 AO (Analog output) 2 bias adjustment,
 - 325 AO (Analog output) 3 bias adjustment.

The bias of each analog output is adjusted.

Setting range: $\pm 10.0\%$ (0.1% step)


Selection by $\boxed{+}$ and $\boxed{-}$, set value is updated by $\boxed{\mathsf{SET}}$.

- ◆ 322 AO (Analog output) 1 span adjustment,
 - 324 AO (Analog output) 2 span adjustment,
 - 326 AO (Analog output) 3 span adjustment.

The span of each analog output is adjusted.

Setting range: $\pm 10.0\%$ (0.1% step)

Selection by + and -, set value is updated by $\overline{\text{SET}}$.

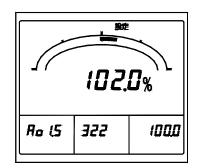

Ao1 span adjustment

6. Specification

6.1 Specification and intrinsic error.

Input circuit	Input
3-phase 3-wire 1-phase 2-wire	AC110V, 220V common use. 50/60Hz
1-phase 3-wire	AC100-200V (13) 50/60Hz

Note(13) The rated voltage of each phase and N phase is 100V.

However, in the case of input voltage full-scale 150V setting of bar graph is 150V (RN, TN) or 300V (RT). And, in the case of input voltage full-scale 300V setting of bar graph is 300V (RN, TN, RT).

Measurement item	Measurement range / Display specification	Intrinsic Digital display	error (14) Analog output (15)	Maximum measurement	Minimum measurement	Notes
Voltage	AC150V to 750kV	±0.5%	$\pm 0.5\%$	0	0	RS-ST-TR line change (16)
Frequency	45.0 to 55.0Hz or 55.0 to 65.0Hz or 45.0 to 65.0Hz Range select	±0.5%	±0.5%	0	0	0.0Hz in case input is below 20% of voltage range. Output is a lower limit value. (Lower limit value -1%:% for output span)

Item	Specification		
Bar graph display	Bar graph display of the main-monitor factor is done. A display of a sub monitor factor can also be set.		
Operating method	Voltage : Effective value computing type. Frequency: Zero cross cycle computing type.		
	Main monitor	Voltage (Each phase and line), Frequency	
The factor in which	Sub monitor (Left)	Voltage (Each phase and line)	
display setting is	Sub monitor (Center)	Voltage (Each phase and line)	
possible	Sub monitor (Right)	Voltage (Each phase and line), Frequency	
	Bar graph	Voltage (Each phase and line), Frequency	
Option	Analog output (3 sets). Alarm output. External operation input.	

- Note (14) If this unit directly measures an inverter output of cycle control, SCR phase angle control or PWM control, an error may increase due to its operation principle.
- Note (15) Analog output, alarm output and external operation input are options.
- Note (16) 1-phase 3-wire (R-N-T): RN-TN-RT, 1-phase 3-wire (R-N-S): RN-SN-RS, 1-phase 3-wire (S-N-T): SN-TN-ST, 1-phase 2-wire: With no phase display.

Measurement is possible range.

Measurement	Input (17)	Measurement is possible range		
factor	Tilput (**)	Display	Analog output	
Voltage	ACO to 150V [ACO to 300V]	101% of meter full scale.	101% of output span.	
	45 to 55Hz	44.9 to 55.1Hz		
Frequency	55 to 65Hz	54.9 to 65.1Hz	-1%, 101% of output span.	
	45 to 65Hz	44.8 to 65.2Hz		

Note(17) [] is the 300V input case.

6.2 Performance

Item	Specification			
Intrinsic error	Reference to measure specification and intrinsic error			
Accuracy of bar graph	±10% (% for span)			
Influence by				
temperature	Within accuracy by 23±1	0°C.		
Compliance standard	JIS C 1102-1:2007, JIS	5 C 1102-2, -4, -7, -9:199	97 , JIS C 1111 : 2006	
Safety	JIS C 1010-1: 2005 CATII (The category to the measurement performed with fabric equipment) Maximum circuit voltage 300V Pollution degree 2 (Usually, environment which only contamination of non-conductivity generates. However, temporary conductivity which originates in dew condensation depending on the case occurs.)			
Display updating time	About 1 second (Bar grap			
Display device Display composition	LCD (Number, Character, Segment color: Black)	Main monitor Sub monitor (Left) Sub monitor (Center), Sub monitor (Right) Bar graph	4 digits, character height 11mm 4 digits, character height 6mm 4 digits, character height 6mm 20 dots	
LCD view angle	For upper installation (For lower view) For lower installation (For upper view) Wide viewing angle	Upper view angle 10°, Lo Right and left view angle Upper view angle 60°, Lo Right and left view angle Upper view angle and lowe Right and left view angle	e 60° ower view angle 10°, e 60° er view angle 75°,	
Backlight	LED backlight: White Always-on, Auto off (after 5 minutes without operating), Always-off. Setting is possible. White backlight can select brightness from five steps of 1 to 5. (18)			
Auxiliary supply (Consumption VA)	AC85 to 264V 50/60Hz 10VA (Rated voltage, AC100/110V, 200/220V) DC80 to 143V 6W (Rated voltage, DC100/110V) for both AC and DC uses			
Rush current (Time constant)	Rated voltage AC110V 2.2A or less (About 2.5ms) Rated voltage AC220V 4.4A or less (About 2.5ms) Rated voltage DC110V 1.6A or less (About 2.5ms)			
Input consumption VA		A or less (110V) , 0.5VA o		
Overload capacity	Voltage circuit 2 times 10 seconds, 1.2 times continuation of rated voltage. 1.5 times 10 seconds, 1.2 times continuation of rated voltage. Auxiliary supply In case of DC110V, 1.5 times 10 seconds, 1.3 times continuation of rated voltage.			
Insulation resistance	Between electric circuits and case (ground). Between input and output and auxiliary supply. Between analog output and alarm output. Above 50MΩ at DC500V megger			
Voltage to-t		re not insulation of minus	s common.	
Voltage test (Commercial frequency	Between electric circuits and case (ground).			
withstand voltage)	Between input and output and auxiliary supply. AC2210V (50/60Hz) 5 seconds			
JIS C 1102-1	Between analog output and alarm output.			
JIS C 1111	Between analog outputs a	s common.		
Impulse voltage test (Lightning impulse withstand voltage) JIS C 1111	Between electric circuit (An analog output is exc Between input and auxili (Grounds an output.)	luded)	5kV 1.2/50μs Both positive and negative polarities, for 3 times each.	
			,	

Note(18) About white backlight.


The white backlight of this product is using white LED which combines the special phosphor and blue LED. In the characteristics of this LED, color tone may be different for each product.

Item	Specification		
	(1) Oscillatory surge voltage		
	When a damping vibration waveform (peak voltage 2.5kV, frequency 1MHz±10%) is		
	repeatedly applied, the measurement error should be within 10% and no malfunction		
	should occur. Auxiliary supply circuit (Normal / Common)		
	Voltage input circuit (Common)		
	(2) Square wave impulse noise		
	If a noise (1 μ s, 100ns width) is repeated and added, a measurement error should		
	be within 10% and no malfunction should occur.		
Noise-capacity	Auxiliary supply circuit (Normal / Common) Over 1500V		
JEA B-402	Voltage input circuit (Common) Over 1500V		
	Alarm output (Common) Over 1000V		
	Operation input (Common) Over 1000V		
	Analog output circuit (Induction) Over 1000V		
	(3) Electric wave noise		
	If intermittence irradiation of the electric wave of a 150MHz,400MHz band is done		
	by (5W, 1m), a measurement error should be within 10% and no malfunction should occur.		
	(4) Electrostatic noise		
	Measurement error shall be within 10% at contact discharge 8kV and air discharge		
Wil ()	15kV, and no malfunction shall occur.		
Vibration	Sweep vibration frequency range: 10 to 55 to 10Hz, Displacement amplitude: 0.15mm,		
JIS C 1102-1	Number of sweep:5, Sweep velocity:1 octave /minute Peak acceleration:490m/s², Waveform of pulse:Sine half wave,		
Shock	Duration of pulse: 11ms		
JIS C 1102-1	Number of shock: 3 times in each direction (forward and backward) in three mutually		
313 € 1102 1	perpendicular axes (18 times in total)		
	Dimension: 110mm (Width) × 110mm (Height) × 103.5mm (Depth) Body diameter: 99mm ϕ		
Construction	With terminal cover, Protection code IP40		
IP code	IP40		
Material	Case, Cover: ABS(V-0) , Terminal block: PBT , Terminal cover: Polycarbonate		
Color	Black (Munsell N1.5)		
Mass	Approx. 600g		
Blackout guarantee	Maximum value, Minimum value, Each setting value. Data hold by nonvolatile memory.		
Operating temperature	I - III TO +557 311 TO X5% RH NON CONDENSING		
and humidity limits	To to 133 C, 30 to 03% Kill, Holl collectioning.		
Storage temperature	-25 to +70°C		
limits			
Installation altitude	The altitude of 2000m or less.		

6.3 Option

Item	Specification					
	Number of outputs 3 circuit			s (Minus common)		
	Output specification DC4 to 20mA (Below 550Ω)					
Analog output				Each phase or line), Frequency		
	Response time		1 second	or less (Time within ±1% of final constant value.)		
	Output ripple		Within th	Within the double precision of accuracy (% for output span)		
	Alarm element	: Voltage	(OR of ea	ch line (phase), Individual of each line (phase)], Alarm OFF.		
		Possibl	e to setti	ing one of them.]		
				r Manual reset (Setting)		
				contact (OR of each phase detection)		
		ity:AC25	OV 5A, DC1	25V O.3A (Resistance load) AC250V 2A, DC125V O.1A (Inductive		
	load)					
Alarm output	Alarm element	I.	tem	Specification		
				Measurement value ≧ Upper limit setting value,		
		Functio	n	Alarm display, Alarm output.		
	Voltage			Measurement value ≦ Lower limit setting value,		
				Alarm display, Alarm output.		
			accuracy			
			range	Using a full scale as 150%. 30 to 150% (1% step)		
	Formation			Three types of following functions can be operated by adding		
	Function			a voltage signal from the outside in addition to switch operation.		
				Alarm output is reset (output OFF).		
	Alarm r	eset		Please refer to "4.3.5 Reset" about operation by the switch.		
				The maximum/minimum value is reset (it updates to the		
	Maximum / Minimum value reset All reset		ım value	instantaneous value at the time).		
External				Please refer to "4.3.5 Reset" about operation by the switch.		
operation				Resets all of the alarm output and maximum/minimum value.		
input				Please refer to "4.3.5 Reset" about operation by the switch.		
	Minimum operation pulse width		e width	300ms , Continuation applying is possible.		
				Input rating becomes the same as that of auxiliary supply.		
				AC100/110V 0.4VA, AC200/220V 1.4VA, DC100/110V 0.4W		
	Rated input			AC DC two ways.		
				Contact capacity: About 3mA (AC, DC100/110V),		
				About 6mA (AC200/220V)		

Caution on the use of external display selection input (option) External power consumption is 0.4VA at AC110V or 1.4VA at AC220V or 0.4W at DC110V. In case a relay or a switch is used for power-supply supply, please use the thing of about 1mA of the minimum application loads.

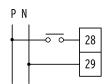


7. Maintenance and check

7.1 Trouble shooting

Symptoms	Possible causes	Remedial measures	
	The power supply is not supplied.	Check the auxiliary supply.	
Does not display	(Not connected. or voltage is low)	Again, a power supply is supplied.	
Dues not display	Measurement display ON/OFF setting is set to OFF.	Check the setting.	
	Trouble of device.	Replace the device.	
Backlight does not	The setting is set to AUTO (automatic off) or OFF	Check the setting.	
lights	(always off).	check the setting.	
	Setting of a range is not right.	Please set again.	
Have a margin of	Wiring is not right.	Check the wiring.	
measurement error	Outside the rated frequency (45 to 65Hz).	Cannot be used.	
illeasurelletti error	Cycle control, SCR phase angle control, PWM control,	Cannot be used.	
	or other inverter output is measured.	Calliot be used.	
Analog output is not	Analog output is set to OFF or measurement factor	Check the setting.	
output	is set to OFF.		
Alarm output does	The return method is a "manual reset".	Check the setting.	
not return		<u> </u>	
The settings had been	The input circuit settings had been changed.	Please set again.	
changed	, 3 2 3		

7.2 Test

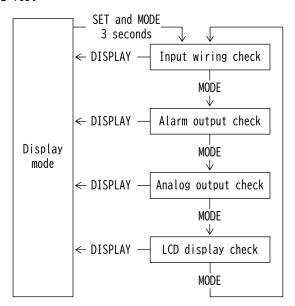



Test mode is selected by pressing <u>SET</u> and <u>MODE</u> switches continuo<u>usly</u> for longer than 3 seconds.

Pushing MODE switch performs movement of setting item. The present mode can be returned to the display mode by pressing DISPLAY switch.

(1) Input wiring check

Check the wiring status on the wiring confirmation screen.

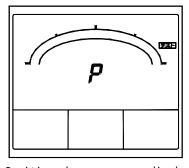

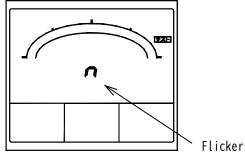

Positive phase sequence display.

Negative phase sequence display.

The example of a display (3P3W)


Main monitor (19): Positive phase sequence, "P" (Positive), Negative phase sequence, "r" (Negative), With no input, "---"

Note(19) When used in 1P3W and 1P2W circuits, it will be "---".

(2) Alarm output check [With an option]


Even if this product does not have input, it can perform ON/OFF test of an alarm output (relay-contact output). Whenever it pushes SET, ON and OFF change.

Default: OFF

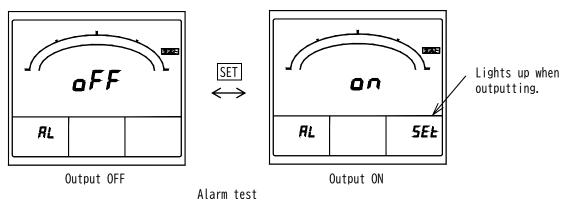

(3) Analog output check [With an option]

Even if this product does not have input, it can test analog output (three circuits).

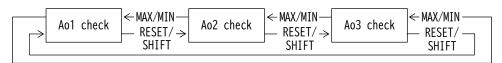

◆ AO (analog output) 1 to 3 check.


Set the output element about each analog output.

Use the + or - switch to select 0% (4mA),

50% (12mA), or 100% (20mA), and press SET to output the analog output.


Default: 0% (4mA)



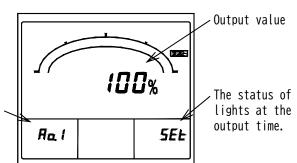


(4) LCD display check

The LCD display can be checked. Press SET to switch the display. Default: Main monitor "LCD" display

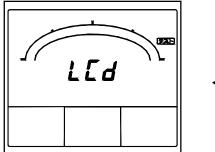



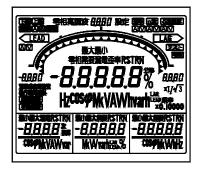

ODAIICHI ELECTRONICS CO., LTD.

Tokyo Office : 11-13, Hitotsuya 1-chome, Adachi-ku, Tokyo, 121-8639, JAPAN.

TEL: +81-3-3885-2411, Fax: +81-3-3858-3966

Kyoto Office: 1-19, Ichinobe-Nishikawahara, Jyoyou-shi, Kyoto, 610-0114, JAPAN.

TEL: +81-774-55-1391, Fax: +81-774-54-1353

DATE: August 21, 2025